

 
How to Change the Keypad Code for your Linear Garage Door Opener

1

To change the Keypad Code, you must erase the memory in the garage door opener.

Locate the LEARN button on the right hand side of the motor unit. This button will have a red indicator light next to it. Press and hold this button for 10 seconds or more. When you release the Learn button, the red light will blink 3 times and then light for 15 seconds.


When the red light goes out, the memory in the operator is erased.

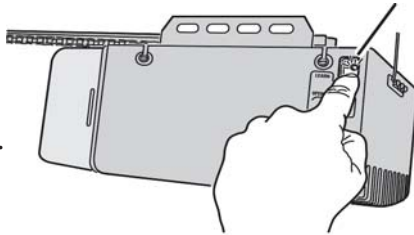

NOTE: Once the memory is erased you must also re-program all of your hand held remotes into the memory.

2

To learn a new keypad code, press and release the LEARN button on the motor unit. The red light will come on for 15 seconds.

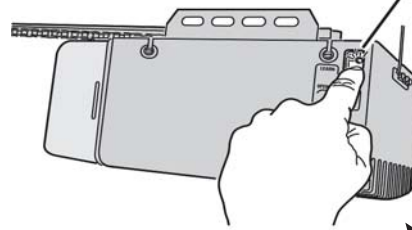

While the red light is on, go to your keypad and enter your desired code (1-6 digits long) and press the start/stop on the keypad.




The red light on the motor unit will blink to indicate receipt of the new code.

3


To re-program your hand held remotes, press and release the LEARN button on the motor unit. The red light will come on for 15 seconds.

NOTE: DO NOT hold the LEARN button down for more than 10 seconds or you will erase the memory and you will have to start over again from Step #1.

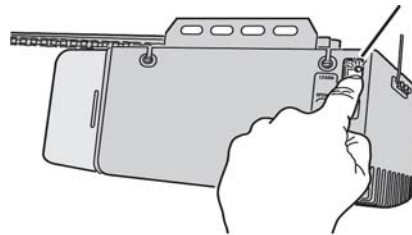

While the red light is on, press the button on the remote you wish to use. The red light on the motor unit will blink to indicate receipt of the new code.

REPEAT FOR ANY ADDITIONAL REMOTES.

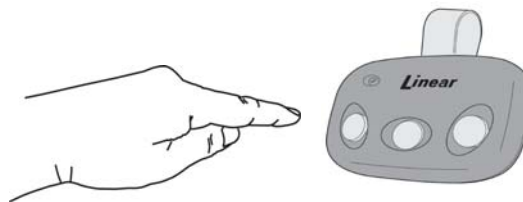

All these brands are now under one name.

