

Homelink®

Wireless Control System

NOTE: Some vehicles may require the ignition to be turned on or to the second (or "accessory") position for programming and/or operation of Homelink. It is also recommended that a new battery be replaced in the hand held transmitter of the device being programmed to Homelink® for quicker training and accurate transmission of the radio frequency. Please make sure that people and objects are out of the way of the moving door or gate when programming to prevent potential harm or damage.

Programming Homelink®


1. For first time programming, press and hold the two outer Homelink buttons releasing only when the Homelink indicator light begins to flash after 20 seconds. (Do not perform this step when programming the additional Homelink buttons)




2. Position the hand-held transmitter 1-3 inches away from the Homelink surface (located on your visor, overhead console or mirror) keeping the Homelink indicator light in view.




3. Using both hands, simultaneously press and hold both the desired Homelink button and hand held transmitter button. DO NOT release until the Homelink indicator light flashes slowly and then rapidly. When the indicator light flashes rapidly, both buttons may be released. (The rapid flashing indicates the frequency signal has been learned.)

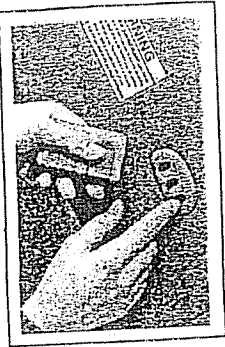


NOTE: Some gate operators and garage door openers may require you to replace step #3 with the "cycling" procedure noted in the "Gate Operator and Canadian Programming" section.

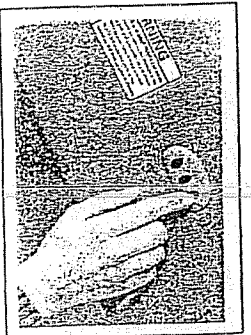

4. Press and hold the programmed Homelink button and observe the indicator light.
 - If the indicator light is solid/continuous, programming is complete and your device should activate when the Homelink button is pressed and released.
 - If the indicator light blinks rapidly for 2 seconds and then turns a solid/continuous light, proceed with the following programming instructions for a rolling code device. A second person may make the following steps quicker and easier. As a safety precaution, DO NOT stand on your vehicle. Use a step ladder or other stable, safe device.

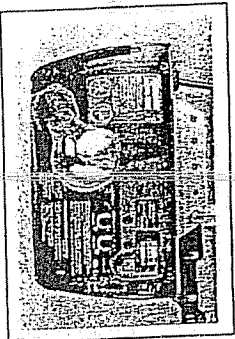

5. At the garage door opener receiver (motorhead unit) in the garage, locate the "learn" or "smart" button (usually near where the hanging antenna wire is attached to the unit). If there is difficulty locating the training button reference the garage door opener's manual, visit our website www.homelink.com or contact us at 1-800-355-3515.

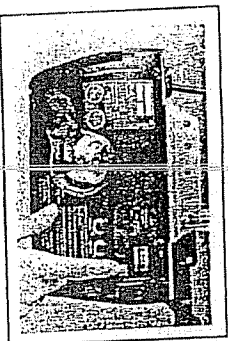

6. Press and release the "learn" or "smart" button (the name and color of the button may vary by manufacturer). NOTE: Once the button is pressed, there are 30 seconds in which to initiate the next step.

7. Return to the vehicle and firmly press and hold the programmed Homelink button for two seconds and release. Repeat the "press/hold/release" sequence up to 3 times to complete the training process.

